

Speed Stick™

Troubleshooting

1. I placed the ST on my layout, and it shows 330mph and won't get to ready.

The ST must be raised off the table by the enclosed FEET, otherwise the sensor sees the tabletop, or in some cases the track roadbed.

2. After Auto Calibration, the directional arrows just bounce back and forth.

Turn power off, then on to reload the calibration settings.

3. After Auto Calibration, you may have to adjust the distance between the ST and the track. Sometimes the auto calibrate results in a shorter range than you expected. Simply auto calibrate a few mm further away and the move the ST closer after the calibration. Copyright© 2024-25 Model Train Technology LLC